

Gaspac Advance



Fast accurate MAP headspace analysis for gas flushed food and pharmaceutical products



Applications

Fresh Meat	Cooked Meat	Vegetables	Salads
Bakery	Snack Foods	Ready Meals	Fish
Pharmaceutical Vials		Pharmaceutical Packaging	

Features & Benefits

- Easy to use touch screen
- 5 different test methods
- Easy to set up and use
- Intuitive menu
- Auto calibrate
- Auto diagnosis
- Set tests for pass or fail
- Printer option
- Computer software option
- Waterproof option


GS1&GS1W Oxygen

GS2&GS2W Carbon Dioxide

GS1, GS2 & GS3



Bench
Mount
Weight: 4.5 kg
140H x 390W x 270D (mm)
Stainless steel and stove
enameled aluminium

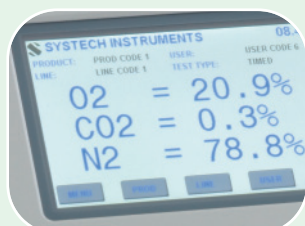

Can Piercing Station

The next generation Gaspace Advance from Sytech Instruments. Fast, accurate and simple to use yet full of the most advanced features available in headspace analysis.

All Gaspace Advance headspace analysers offer automatic calibration, diagnostics and control.

The Gaspace Advance offers consistently reliable results and simplicity in operation allowing you to maximise your production efficiency.

Test Easily

Using the large buttons and big clear display; testing is simple, errors are eliminated and no special operator training is required.

Test Quickly

Using AutoSense allows many packs to be tested with just one button press. Saving you time and making your QA department more efficient.

Test all pack sizes

One analyser can test all pack sizes and very low volumes. Rigid cans and jars can be analysed with the simple to use Can Piercing station.

Test how you want to

With Timed tests, AutoSense, Peak / Valley, Syringe Direct Injection or Continuous testing. Fast configuration and fast selection, provides the test method that is best for you.

Simple configuration

Simple configuration for all test types and methods – no special training required to use all the highly advanced features.

Auto-Cal & Auto diagnosis

Ensures the instrument is always performing to it's highest degree of accuracy - essential for HACCP compliance.

Technical Specifications

Sensor Type

GS1 and GS1W	Oxygen 0 to 100%, Zirconia, solid state, ultra low volume
GS2 and GS2W	Carbon Dioxide 0 to 100%, dual wavelength, Infra-red
GS3 and GS3W	Oxygen 0 to 100%, Zirconia, solid state, ultra low volume Carbon Dioxide 0 to 100%, dual wavelength, Infra-red Balance Gas 0 to 100%, Arithmetic
Response time	3 seconds
Minimum volume of sample gas	Extremely small, dependent on equilibrium levels. Consult factory.
Accuracy:	Oxygen 10 to 100% 0.2% absolute (max 2% of reading) and ± 1 on the last digit. 1 to 9.99% 0.02% absolute (max 2% of reading) and ± 1 on the last digit. 0 to 0.999% 0.005 % absolute and ± 1 on the last digit.
	Carbon Dioxide $\pm 0.5\%$ absolute and $\pm 1.5\%$ of reading
Range selection	Automatic to 3 decimal places Oxygen: 0.001% to 99.9% CO ₂ : 0.1% to 99.9%
Display type	Wide angle 95mm x 55mm 4.5" High Resolution Touchscreen LCD

Operating conditions

Sample connections	Needle probe, can piercing station or direct syringe injection
Alarms	Programmable high/low limits for each measured gas, individual setting for up to 99 product, user and production line codes. Screen and printed display of high/low alarm conditions
Internal datalog	Stores over 1000 measurement results and alarm conditions
Communications interfaces	Serial computer interface for reports and data logging
Auto diagnostic routine	Initiated upon power up
Auto-cal	Auto calibration routine standard
Auto pass/fail	User programmable. Screen and printed display of alarm conditions
Auto test sequencing	Initiated by sample probe insertion into pack

Options

Internal Printer	Prints the results and alarms for each test
Flexible package kit	Everything required for analysis from standard packets and pouches
Can Piercing Station	For analysis from rigid cans and jars
Carry Case	Aluminium framed flight case
Data Transfer Software	For configuration and downloading of reports and internal datalog

Power Requirements

Mains power	90-260 Vac, 50/60Hz – Automatically sensed
-------------	--

Systech Instruments have over 25 years experience of providing analysis solutions for a wide range of industries. From our manufacturing plant in the UK we produce gas analysers for industrial process industries, headspace analysers for monitoring gas flushing of food products, and our range of permeation analysers.

Systech Instruments Ltd (UK)
17 Thame Park Business Centre,
Wenman Road,
Thame, Oxfordshire OX9 3XA
Tel: +44 (0)1844 216838
Fax: +44 (0)1844 217220
E-mail: advice@systech.co.uk
www.systechinstruments.com

Illinois Instruments, Inc (U.S)
2401 Hiller Ridge Road
Johnsburg, Illinois 60051
U.S.A
Tel: +1 815 344 6212
Fax: +1 815 344 6332
E-mail: sales@illinoisinstruments.com
www.illinoisinstruments.com

Illinois Instruments (Thailand)
6th fl Nopnarong Bldg No7
Ladprao23, Jatujak, Bangkok 10900
Thailand
Tel: +66 (0)2938 0798
Fax: +66 (0)2938 1058
E-mail: mai@illinoisinstruments.com
www.illinoisinstruments.com

Systech Illinois (China)
Room 519, No.3 FuCheng Building
No. 900 Quyang Rd, Hongkou district,
Shanghai, China 200434
Tel: +86 21 65533022
Fax: +86 21 65539651
Email: info@systechillinois.cn
www.systechillinois.cn

Systech reserve the right to change specifications without notice. 04/10